

EVEREADY®

Mini Charger Instruction Manual

Model : **EV2PC2**

Input : AC220-240V, 50/60Hz

Output : 2AA x 170-200mA
2AAA x 80-100mA

BATTERY CHARGING TABLE (Hours)

| | | |
|----------|---------|----|
| AA NiMH | 2000mAh | 13 |
| AA NiMH | 2450mAh | 16 |
| AAA NiMH | 700mAh | 11 |

AA • AAA

NiMH

*The above charging time is a guide only. Timing may differ according to brands and environmental conditions at time of charging

Thank you for choosing Eveready® Rechargeable System.

This manual contains important operating and safety instructions for your charger. Please read all charging instructions and cautionary markings on the battery charger before using charger.

- 1 Load 1 AA or 1 AAA battery into each channel.
- 2 Install batteries orientation' according to the polarity (+/-) symbols.
- 3 Plug the charger into a standard AC Outlet. Never use an extension cord.
- 4 Switch off, unplug and remove batteries from charger when charging completes.

The Red "LED" glows when charging is in progress.

The Red "LED" diminish when charging is complete.

If the Red "LED" does not light up, please check that the polarities are matched.

WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging any other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Always unplug the charger from outlet before attempting maintenance or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.